

# Log Chain Conversion No Banana Peel Rail



# **Owner's Manual**

Sonny's Enterprises, Inc. 5605 Hiatus Road Tamarac, Florida 33321

15v2



## **\*Table of Contents\***

WARNING *SAFETY REQUIREMENTS* WARNING	3
*INTRODUCTION*	5
Equipment Installation	6
Adjustments and Testing	7
*WARRANTY*	8
*CUSTOMER SERVICE*	9



### WARNING \*SAFETY REQUIREMENTS\* WARNING

- 1. All employees must be thoroughly trained in safe operation and standard maintenance practices. All employees must review this entire manual monthly.
- 2. Do not enter the wash tunnel when the equipment is operating. Death or dismemberment may occur.
- 3. Do not wear loose fitting clothing or jewelry around moving equipment. Do not allow any part of your body or other objects (including ladders, hoses or tools) to come in contact with moving equipment. Entanglement may result causing death or dismemberment.
- 4. Do not leave a ladder or any other items such as wash down hoses or tools in the wash tunnel while equipment is running. Vehicle damage and injury, including death, can occur.
- 5. Always exercise caution when walking (never run) through the wash tunnel as there may be slippery conditions. Be careful so you do not bump into or trip over equipment.
- 6. Only those employees specifically instructed and trained by the location management are permitted to enter the wash tunnel to perform inspections or maintenance. At least two qualified maintenance people must be present when performing equipment repairs or preventive maintenance.
- 7. Do not perform any maintenance or work on equipment unless you first perform Lock-Out Safety Precautions. All electrically powered equipment must have manually operated disconnects capable of being locked in the "OFF" position. Equipment that has been "locked out" for any reason must be restarted only by the person who performed the "lock out" operation.
- 8. When working on any equipment that is higher than your shoulders, always use a fiberglass ladder that is in good condition.
- 9. Do not attempt to repair or adjust any pressurized liquid or pneumatic part, hose, pipe or fitting while that equipment is in operation.
- 10. Electrical connections and repairs must be performed by a Licensed Electrician Only.
- 11. Emergency "STOP" buttons must be well marked and their location and proper use reviewed with all personnel. Any activated "STOP" button must be reset only by the person who activated it. Clear the wash tunnel of any people, ladders, hoses, tools and other loose items before restarting the equipment. An audible device must sound to warn people that the equipment is starting.
- 12. Do not operate any piece of equipment that requires safety covers with those covers removed or improperly installed. Do not operate any piece of equipment if any component of that piece is suspected to be defective or malfunctioning.

© SONNY'S The CarWash Factory This document is confidential and proprietary to SONNY'S and cannot be used, disclosed or duplicated without prior written consent. Content, prices and availability subject to change without notice. SonnysDirect.com Page 3 of 9 6.7.2016



### Equipment Program – Manuals Log Chain Conversion No Banana Peel Rail

- 13. Store all cleaning and washing solutions and oils in a well-ventilated area. Clean up fluid spills immediately to prevent hazardous safety conditions. Be certain to follow all safety procedures on SDS Sheets for each chemical product used.
- 14. All hydraulic and electric systems in the wash tunnel equipped with a torque relief or overload should be checked and set at the minimum amount that will allow for proper functionality under normal washing conditions.
- 15.No unauthorized people should ever be permitted in the wash tunnel or near the equipment at any time.

### !! CAUTION!!

\* \* \*

When a piece of equipment must be in operation during inspection or maintenance, one qualified technician must stay at the power disconnect switch while another qualified technician performs the inspection or maintenance.



# \*INTRODUCTION\*

This Manual contains information that is vital to the successful installation, operation and maintenance of your SONNY'S vehicle washing equipment.

Please read, and understand, the full contents of this manual before installation and operation of the equipment. Keep this booklet in a location where it may be used for ongoing reference.

Should you have any questions on the operation or servicing of this equipment please contact

TECHNICAL SERVICES DEPT. SONNY'S ENTERPRISES, INC. 5605 Hiatus Road TAMARAC, FLORIDA 33321 TELEPHONE: 800-327-8723 FAX: 800-495-4049

THANK YOU FOR YOUR CONFIDENCE IN SONNY'S !!!!!



© SONNY'S The CarWash Factory This document is confidential and proprietary to SONNY'S and cannot be used, disclosed or duplicated without prior written consent. Content, prices and availability subject to change without notice. SonnysDirect.com Page 5 of 9 6.7.2016



## Equipment Installation Log Chain


**Tools** 1. Cutting Torch Consumables None

Work Force One (1) person **Time (assuming no problems)** 1.00 - 3.00 hours

#### **Repair Steps**

**Caution:** You must shut off all power to the conveyor and lock out the Motor Control Center before starting this repair.

- 1. Check height from bottom deck of conveyor to the top of the H-frame where each section of conveyor bolts together. If your measurement is 5" or less it needs to be cut.
- 2. Each section needs  $1 \frac{1}{2}$  cut off. See the pictures below.
- 3. The conveyer measurement should start at zero on the entrance end for the first twenty five feet (25') then taper to one and a half inches (1.5"). The last fifteen to twenty-five feet (15'- 25') should taper to three quarters (3/4") of an inch. This is important to avoid potential roller jambs.

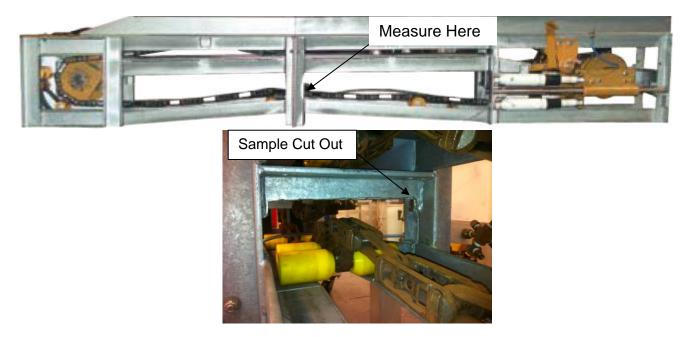

© SONNY'S The CarWash Factory This document is confidential and proprietary to SONNY'S and cannot be used, disclosed or duplicated without prior written consent. Content, prices and availability subject to change without notice.

SonnysDirect.com Page 6 of 9 6.7.2016



# **Adjustments and Testing**

#### **Conveyor Speed**

- 1. Conveyor speed can be adjusted at the flow control valve on the Hydraulic Power Pack that supplies fluid for the Conveyor.
- 2. Conveyor speed may be set from 50 to 200 cars per hour depending on the equipment in the tunnel and the quality of wash desired.
- 3. To determine the speed of the chain measure the length in inches a roller travels in 15 seconds. That number will be the same as the number of cars per hour the conveyor is set to.

Inches of Roller Travel in 15 seconds = Cars Per Hour

#### **Speed and Torque Adjustment**

- 1. Hydraulic
  - a. The speed can be adjusted on the flow control for the power pack.
  - b. To increase the speed move the handle on the flow control closer to the number 10.
  - c. To decrease the speed move the handle on the flow control closer to the number 1.
  - d. The torque must be set prior to operation and should be set between 600 and 900 PSI. For information on how to set the torque please refer to the Hydraulic Power Pack Manual.
- 2. Electric
  - a. The speed can be adjusted on the Variable Frequency Drive (VFD).
  - b. To increase the speed adjust the Hertz on the VFD to a higher number.
  - c. To decrease the speed adjust the Hertz on the VFD to a lower number.
  - d. The Overload on the Motor Starter protector(s) must be set at the lowest level to allow for operation. Adjust the amps in accordance with motor(s) name plate.

#### **Conveyor Stall Torque**

- 1. Conveyor stall torque can be adjusted at the bypass valve on the Hydraulic Power Pack that supplies fluid for the Conveyor.
- 2. Pressure gauge should indicate 1200PSI when the Power Pack is running with the conveyor stalled.

© SONNY'S The CarWash Factory This document is confidential and proprietary to SONNY'S and cannot be used, disclosed or duplicated without prior written consent. Content, prices and availability subject to change without notice.



### Equipment Program – Manuals Log Chain Conversion No Banana Peel Rail

# \*WARRANTY\*

### SONNY'S ENTERPRISES, INC. FACTORY LIMITED LIFETIME WARRANTY

Equipment manufactured by SONNY'S ENTERPRISES, INC. is warranted to be free from defect in material and workmanship. Welded metal framework and other non-moving, non-wearable fabricated metal components manufactured by SONNY'S are warranted for the life of the equipment to the original purchaser. Fabricated metal wearable surface and moving components manufactured by SONNY'S are warranted for a period of one (1) year to the original purchaser of the equipment.

All components assembled to SONNY'S equipment that are manufactured by others are warranted by the appropriate manufacturer and subject to that manufacturer's limited warranty. Contact SONNY'S for the specific information on other component manufacturer's warranty terms. All new cloth shipped with new SONNY'S equipment is warranted for a period of one (1) year or 80,000, whichever occurs first.

This warranty is not assignable or transferable. The warranty period begins the first day following installation or 30 days from the original invoice date, whichever occurs first. The Seller's liability shall be limited to repair or replacement of materials found to be defective within the warranty period. In the event of repair or replacement this limited warranty is noncumulative. The Purchaser must supply the Seller with immediate written notice when any defects are found. The Seller shall have the option of requiring the return of defective material to establish the Purchaser's claim. Neither labor nor transportation charges are included in this warranty. Transportation damage claims are to be submitted to the carrier of the damaged materials.

This warranty is based upon the Purchaser's reasonable care and maintenance of the warranted equipment. It does not apply to any equipment which has been subject to misuse, including neglect, accident or exposure to harsh chemicals or chemicals that react violently with: water, organic acids (e.g. acetic acid), inorganic acids (e.g. hydrofluoric acid), oxidizing agents (e.g. peroxides), and metals (e.g. aluminum). Chemicals corrosive to: aluminum alloys, carbon steel, and other metals. Nor does it apply to any equipment which has been repaired or altered by anyone not so authorized by SONNY'S. Further, the equipment must be properly installed with proper accuracy of all specified plumbing, electrical, and mechanical requirements. This warranty does not apply to normal wear and tear or routine maintenance components.

EXCEPT AS EXPRESSLY STATED HEREIN, SONNY'S SHALL NOT BE LIABLE FOR DAMAGES OF ANY KIND IN CONNECTION WITH THE PURCHASE, MAINTENANCE, OR USE OF THIS EQUIPMENT INCLUDING LOSS OF PROFITS AND ALL CLAIMS FOR CONSEQUENTIAL DAMAGES. THE LIMITED WARRANTY EXPRESSED HEREIN IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED. SONNY'S NEITHER ASSUMES NOR AUTHORIZES ANY PERSON TO ASSUME FOR IT ANY OTHER OBLIGATION OR LIABILITY IN CONNECTION HEREWITH.

© SONNY'S The CarWash Factory This document is confidential and proprietary to SONNY'S and cannot be used, disclosed or duplicated without prior written consent. Content, prices and availability subject to change without notice. SonnysDirect.com Page 8 of 9 6.7.2016



# \*CUSTOMER SERVICE\*

Please contact SONNY'S Equipment Department for installation and/or operational questions regarding this piece of equipment.

Please refer to the Parts Catalog and contact SONNY'S Customer Service Order Entry Department for any replacement parts for this piece of equipment.

You can also visit the web at <u>www.SonnysDirect.com</u>.

**DEPARTMENT** Toll Free Main Line Equipment Department **PHONE NUMBERS** 800-327-8723 954-720-4100

**FAX NUMBERS** 800-495-4049 954-720-9292

#### Or you can email Sales at sales@SonnysDirect.com

#### Thank you for being a SONNY'S car wash equipment owner!

From all of us here at



© SONNY'S The CarWash Factory This document is confidential and proprietary to SONNY'S and cannot be used, disclosed or duplicated without prior written consent. Content, prices and availability subject to change without notice. SonnysDirect.com Page 9 of 9 6.7.2016