

Front Grill Brush

SF50 (2009 - Built without Pillow Block Hanger Arm Bearings)



Owner's Manual

Sonny's Enterprises LLC 5605 Hiatus Road Tamarac, Florida 33321



Table of Contents

WARNING *SAFETY REQUIREMENTS* WARNING	3
INTRODUCTION	5
Product Specifications	6
INSTALLATION	9
Utilities Requirements	9
Dimensions	10
Insert Patterns 36 Slot Hub 10" Diameter	15
Sonny's NeoGlide Installation	
Equipment Installation	18
Front Grill Brush Installation	18
Adjustments and Testing	20
GENERAL OPERATION	21
PREVENTIVE MAINTENANCE	22
PARTS	23
WARRANTY	25
CUSTOMER SERVICE	26

Sonny's and Sonny's The CarWash Factory are Registered trademarks of Sonny's Enterprises LLC Make CarWashing Easy and OneWash are trademarks of Sonny's Enterprises LLC **Designed** here. **Built** here. **Backed** here. is a trademark of Sonny's Enterprises LLC Products mentioned herein are for identification purposes only and may be registered trademarks of their respective companies. All other brand names, trademarks or registered trademarks are the property of their respective owners.

© 2021 SONNY'S The CarWash Factory[®]. All Rights Reserved. SonnysDirect.com This document is confidential and proprietary to SONNY'S and cannot be used, disclosed or Page 2 of 26 published without prior written consent. Content, prices, and availability subject to change without notice.



WARNING *SAFETY REQUIREMENTS* WARNING

- 1. All employees must be thoroughly trained in safe operation and standard maintenance practices. All employees must review this entire manual monthly.
- 2. Do not enter the wash tunnel when the equipment is operating. Death or dismemberment may occur.
- Do not wear loose fitting clothing or jewelry around moving equipment. Do not allow any 3. part of your body or other objects (including ladders, hoses, or tools) to come in contact with moving equipment. Entanglement may result causing death or dismemberment.
- 4. Do not leave a ladder or any other items such as wash down hoses or tools in the wash tunnel while equipment is running. Vehicle damage and injury, including death, can occur.
- 5. Always exercise caution when walking (never run) through the wash tunnel as there may be slippery conditions. Be careful so you do not bump into or trip over equipment.
- Only those employees specifically instructed and trained by the location management 6. are permitted to enter the wash tunnel to perform inspections or maintenance. At least two qualified maintenance people must be present when performing equipment repairs or preventive maintenance.
- 7. Do not perform any maintenance or work on equipment unless you first perform Lock-Out Safety Precautions. All electrically powered equipment must have manually operated disconnects capable of being locked in the "OFF" position. Equipment that has been "locked out" for any reason must be restarted only by the person who performed the "lock out" operation.
- 8. When working on any equipment that is higher than your shoulders, always use a fiberglass ladder that is in good condition.
- 9. Do not attempt to repair or adjust any pressurized liquid or pneumatic part, hose, pipe or fitting while that equipment is in operation.
- 10. Electrical connections and repairs must be performed by a Licensed Electrician Only.
- 11. Emergency "STOP" buttons must be well marked and their location and proper use reviewed with all personnel. Any activated "STOP" button must be reset only by the person who activated it. Clear the wash tunnel of any people, ladders, hoses, tools, and other loose items before restarting the equipment. An audible device must sound to warn people that the equipment is starting.
- 12. Do not operate any piece of equipment that requires safety covers with those covers removed or improperly installed. Do not operate any piece of equipment if any component of that piece is suspected to be defective or malfunctioning.

^{© 2021} SONNY'S The CarWash Factory[®]. All Rights Reserved. This document is confidential and proprietary to SONNY'S and cannot be used, disclosed or



- 13. Store all cleaning and washing solutions and oils in a well-ventilated area. Clean up fluid spills immediately to prevent hazardous safety conditions. Be certain to follow all safety procedures on SDS Sheets for each chemical product used.
- 14. All hydraulic and electric systems in the wash tunnel equipped with a torque relief or overload should be checked and set at the minimum amount that will allow for proper functionality under normal washing conditions.
- 15. No unauthorized people should ever be permitted in the wash tunnel or near the equipment at any time.

!! CAUTION !!

When a piece of equipment must be in operation during inspection or maintenance, one qualified technician must stay at the power disconnect switch while another qualified technician performs the inspection or maintenance.



INTRODUCTION

This Manual contains information that is vital to the successful installation, operation and maintenance of your SONNY'S vehicle washing equipment.

Please read, and understand, the full contents of this manual before installation and operation of the equipment. Keep this booklet in a location where it may be used for ongoing reference.

Should you have any questions on the operation or servicing of this equipment please contact:

TECHNICAL SERVICES DEPT. SONNY'S ENTERPRISES INC. 5605 Hiatus Road TAMARAC, FLORIDA 33321 TELEPHONE: 800-327-8723 FAX: 800-495-4049

THANK YOU FOR YOUR CONFIDENCE IN SONNY'S !!!!!



© 2021 SONNY'S The CarWash Factory[®]. All Rights Reserved. SonnysDirect.com This document is confidential and proprietary to SONNY'S and cannot be used, disclosed or Page 5 of 26 published without prior written consent. Content, prices, and availability subject to change without notice.



Product Specifications

- > Frame and legs constructed from aluminum or stainless steel
- Includes NEOGLIDE material
- > Brush angled for smooth operation around large trucks and SUVs
- Double roller bearings
- Unique three hub design 12", 10", 6"
- > Hydraulic brush drive motors use 4GPM @ 800PSI
- Shock absorber and air control
- > 133" of tunnel length required
- > 90" vehicle clearance



Get in your Grid Problem: You need to eliminate the

You need to eliminate the expense and time to pre-wash grills, license plates, and headlights to remove bugs and other caked on road grime.

Solved:

SONNY'S Grill Brush is like two washers in one. It follows and cleans the complete front of the vehicle safely, before washing side surfaces like a standard 50in brush. The grill brushes are gentle and cannot bend license plates since they rotate "at" the vehicle in the opposite rotation of the available Wrap-Around Washers. They provide the necessary strength to clean with absolutely no prepping.

- Durable QuadX aluminum legs
- Includes water manifold
- Adjustable shock absorbers for accurate pressure and material penetration
- Hollow steel shaft end provides solid motor coupling
- Torque-channel design increases motor life
- Includes full retract capability
- · Includes pre-plumbed cross-over arch
- Shown with optional powder coating



Drive to Meet Your Life Requirements Warran



LifeTime Limited Weldment Warranty for Generations to Come

© 2021 SONNY'S The CarWash Factory[®]. All Rights Reserved.

This document is confidential and proprietary to SONNY'S and cannot be used, disclosed or Pag published without prior written consent. Content, prices, and availability subject to change without notice.

SonnysDirect.com Page 7 of 26 t notice

Optional pre-plumbed cross-

over arch for cleaner, faster

Hub Configuration

Inch

6in

10in

12in

28 slots

36 slots

44 slots

Metric

152mm

254mm

305mm

installation.

Top Hub

Middle Hub

Bottom Hub

Top Hub Slots

Middle Hub Slots

Bottom Hub Slots

Adjustable bearing


and arm mount.



Specifications

	Inches	Metric			
Footprint Length	125in	3.17m			
Footprint Width	144in	3.65m			
Unit Height	142in	3.60m			
Vehicle Clearance	90in	2.28m			
Water Inlet	1/2in	13mm			
Hydraulic Option	4GPM Per Motor				
Electric Option	1HP 3-Phase 208-460V per Motor				



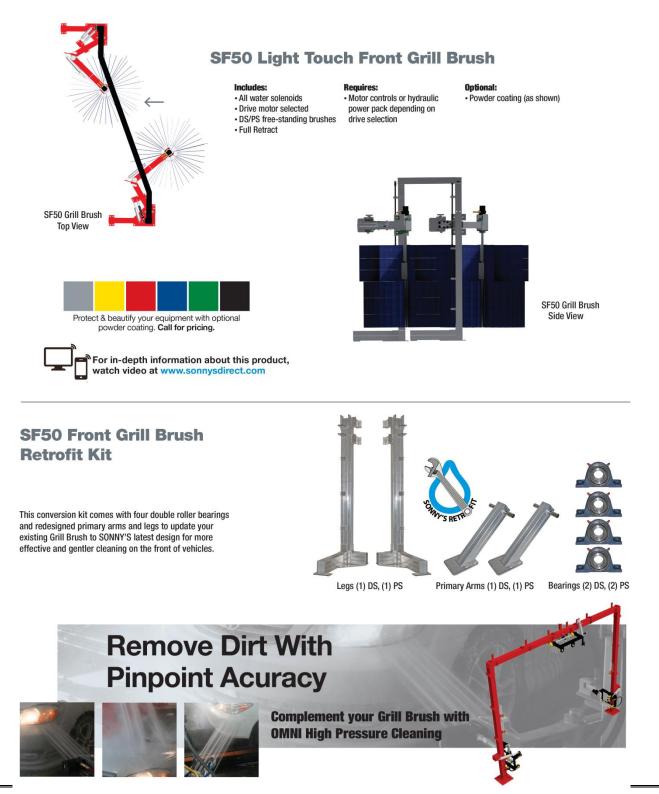

© 2021 SONNY'S The CarWash Factory[®]. All Rights Reserved. Sonnys This document is confidential and proprietary to SONNY'S and cannot be used, disclosed or F published without prior written consent. Content, prices, and availability subject to change without notice.

SonnysDirect.com Page 8 of 26

Manual-O, Front Grill Brush 16v1 – Rev 2021-A



INSTALLATION Utilities Requirements

UTILITIES INTERCONNECTION AND THE MATERIALS REQUIRED FOR INTERCONNECTION TO SONNY'S EQUIPMENT ARE THE RESPONSIBILITY OF THE CUSTOMER ! PERFORM ALL TRADES WORK TO ALL APPLICABLE LOCAL AND NATIONAL CODES !

Water

• The Customer's Plumber is to provide and install a 1/2 inch city water line @ 60PSI (nominal) to the solenoid valve on the chemical distribution system for the Washer.

Electrical

- The Customer's Electrician is to provide and install single phase power from the (24 or 110VAC as determined at time of order) from the Customer's Controller system to the liquid solenoid valve for the brush spray bars and, if required, the motor starter coil for the hydraulic power pack feeding the two brushes and any pump motor for the chemical distribution system.
- Where applicable, the Customer's Electrician is to provide materials and install 208VAC or 230VAC or 460VAC, 3-phase, 60Hz power to the electric motor on the hydraulic power pack or VFD panel from a properly sized three pole circuit breaker and motor starter with three thermal overloads.

Optional Retract Kit Requirements

Electrical

• The Customer's Electrician is to provide and install single phase power from the remote push-button station through the tunnel equipment programmer to the supplied air solenoid valve on the Air Distribution Manifold for retract of both washers upon selective signal (See Figure #6 in Dimensions Section).

Compressed Air

• The Customer's Plumber is to provide and install a 1/2 inch compressed air line from the Air Compressor to the Air Distribution Manifold for the Retract functions.

^{© 2021} SONNY'S The CarWash Factory[®]. All Rights Reserved. SonnysDirect.com This document is confidential and proprietary to SONNY'S and cannot be used, disclosed or Page 9 of 26 published without prior written consent. Content, prices, and availability subject to change without notice.



Dimensions

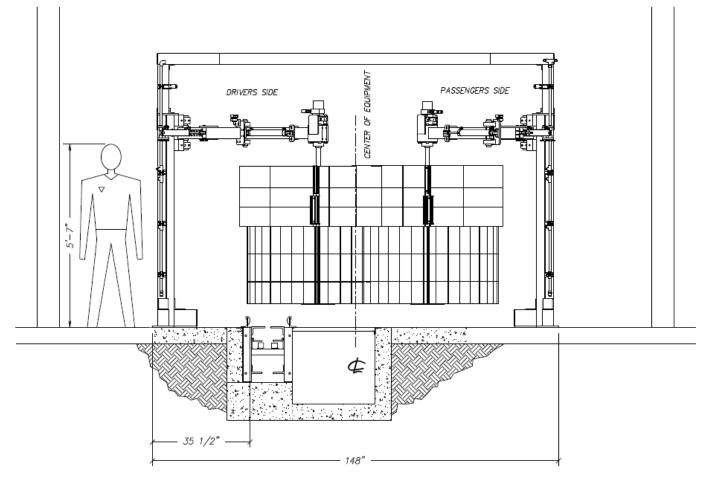


Figure #1

© 2021 SONNY'S The CarWash Factory[®]. All Rights Reserved. SonnysDirect.com This document is confidential and proprietary to SONNY'S and cannot be used, disclosed or Page 10 of 26 published without prior written consent. Content, prices, and availability subject to change without notice.




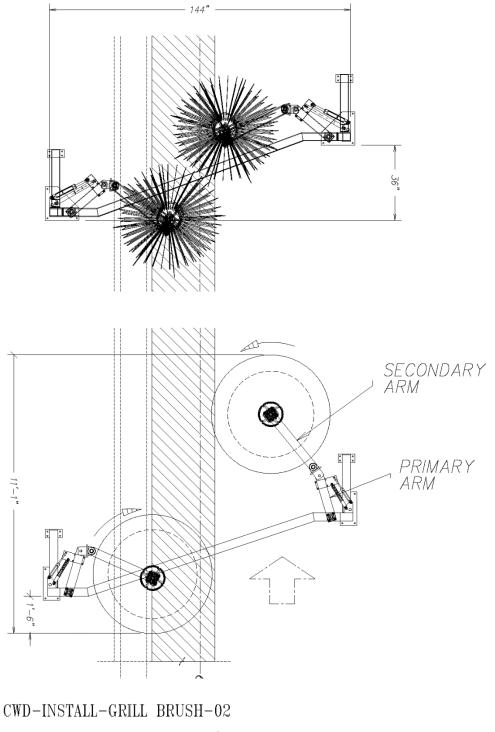


Figure #2

© 2021 SONNY'S The CarWash Factory[®]. All Rights Reserved.

SonnysDirect.com This document is confidential and proprietary to SONNY'S and cannot be used, disclosed or Page 11 of 26 published without prior written consent. Content, prices, and availability subject to change without notice.




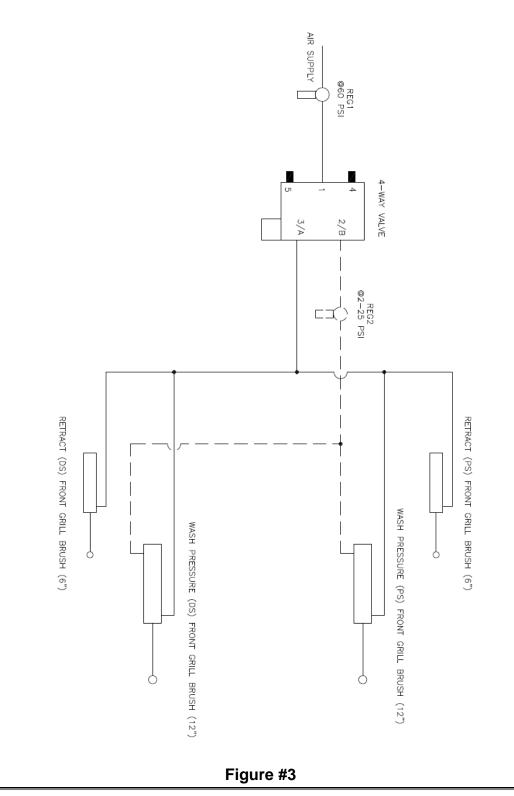

© 2021 SONNY'S The CarWash Factory[®]. All Rights Reserved.

SonnysDirect.com This document is confidential and proprietary to SONNY'S and cannot be used, disclosed or Page 12 of 26 published without prior written consent. Content, prices, and availability subject to change without notice.



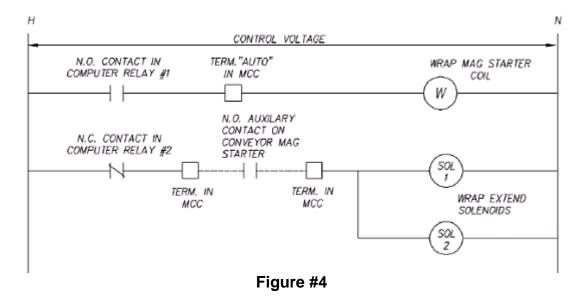



SONNY'S MODEL #SF50 & SFB50 "SUV" SIDE WASHERS

HYDRAULIC INTERCONNECTION


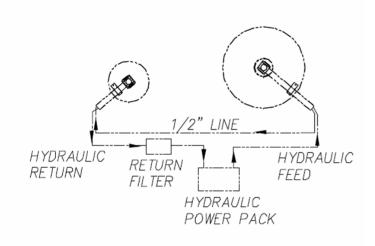


Figure #5

© 2021 SONNY'S The CarWash Factory[®]. All Rights Reserved. SonnysDirect.com This document is confidential and proprietary to SONNY'S and cannot be used, disclosed or Page 14 of 26 published without prior written consent. Content, prices, and availability subject to change without notice.




Insert Patterns 28 Slot Hub 6" Diameter

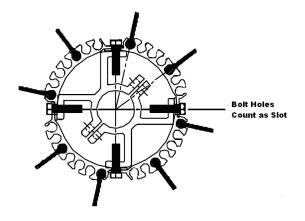

8 Position Material


Insert Patterns 36 Slot Hub 10" Diameter

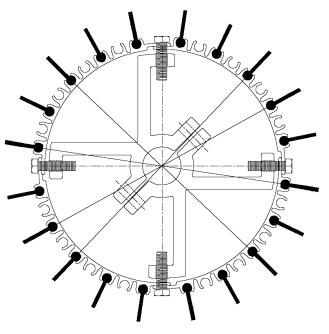

20 Position Material

© 2021 SONNY'S The CarWash Factory[®]. All Rights Reserved. SonnysDirect.com This document is confidential and proprietary to SONNY'S and cannot be used, disclosed or Page 15 of 26 published without prior written consent. Content, prices, and availability subject to change without notice.



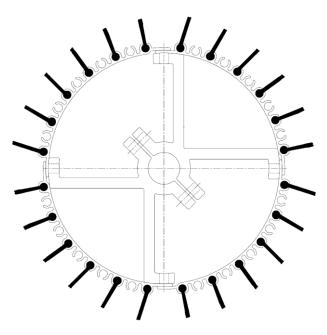

Insert Patterns 44 Slot Hub 12" Diameter


24 Position Material

© 2021 SONNY'S The CarWash Factory[®]. All Rights Reserved. SonnysDirect.com This document is confidential and proprietary to SONNY'S and cannot be used, disclosed or Page 16 of 26 published without prior written consent. Content, prices, and availability subject to change without notice.



Sonny's NeoGlide Installation

CWD-NeoGlide-SFGRILL-50

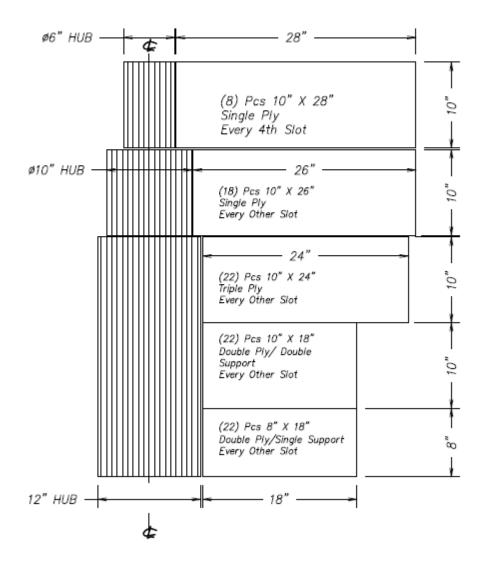

© 2021 SONNY'S The CarWash Factory[®]. All Rights Reserved. SonnysDirect.com This document is confidential and proprietary to SONNY'S and cannot be used, disclosed or Page 17 of 26 published without prior written consent. Content, prices, and availability subject to change without notice.



Equipment Installation

Front Grill Brush Installation

Installation Tools

- 1. Safety Glasses
- 2. 1/2" Drive Ratchet Set
- 1. Standard Combo Wrenches
- 2. Tape Measure
- 3. Permanent Marker
- 4. 4' Level
- 5. Electric Impact Wrench
- 6. 5' Pry Bar
- 7. 1" Hammer Drill
- 8. Sledgehammer

Work Force

One (1) Person

Time (assuming no problems) 1.00 - 2.00 hours

Installation Steps

- 1. Determine where the Washer Frame is to be installed. Refer to tunnel layout diagram.
- 2. Sweep any debris from where the Washer will stand.

Note: Ensure the Washer Frame is correctly located before installing any lag bolts. Before lagging the frame into position have a second person double check all measurements against your tunnel equipment layout drawings to ensure all measurements were performed correctly.

- 3. Bring the driver side leg into the building using the lift-a-ma-jig. Do not cut the brush arms free.
- 4. Place 46" from the inside of the passenger guide rail and the correct distance from the entrance for your tunnel layout.
- 5. Square the Washer Frame to the conveyor. Plumb the legs and level the hanger arms. Shim the base as needed.
- 6. Lag one corner of the driver's side base and recheck all measurements. Once confirmed, lag the opposite corner on the passenger's side then finish lagging the brush in place.

Consumables

1. PTFE Paste 2. PTFE Tape

^{© 2021} SONNY'S The CarWash Factory®. All Rights Reserved.

SonnysDirect.com This document is confidential and proprietary to SONNY'S and cannot be used, disclosed or Page 18 of 26 published without prior written consent. Content, prices, and availability subject to change without notice.



- 7. Check that the shock on each brush hanger does not "bottom out" in their fully extended position. If this occurs move the shock mounting position to a different hole on the mounting bracket to prevent a fully extended condition.
- 8. Attach the primary arms to the unit.

Note: The SONNY'S supplied <u>BLACK</u> high pressure hose on the washer unit is for the hydraulic PRESSURE connection. The SONNY'S supplied <u>ORANGE</u> high pressure hose on the washer unit is for the hydraulic RETURN connection.

- 9. Run and connect a 1/2 inch PRESSURE line from the Hydraulic Power Pack to the 1/2 inch male pipe thread fitting on the BLACK high pressure hose on the leg of the Washer.
- 10. Run and connect the 1/2 inch RETURN line to the Hydraulic Power Pack to the 1/2 inch male pipe thread fitting on the ORANGE high pressure hose on the leg of the Washer.
- 11. Run and connect the chemical lines from the Chemical Distribution Manifold to the chemical line on the Wrap frame for the application nozzles.
- 12. Rotation of the Brushes is against vehicle travel. As viewed from the top of each Brush the DRIVER side turns CLOCKWISE and the PASSENGER side turns COUNTERCLOCKWISE.
- 13. Run and connect the air lines from the Air Distribution Manifold to the air cylinder for each retract (See Figure #3 in the Dimensions Section).
- 14. Install cloth on the Brush Cores according to the type of material being used.



Adjustments and Testing

Adjust the Cleaning Pressure of the Washer

To adjust the pressure applied to the vehicle the mounting position and the spring position of the shocks can be changed. Cloth penetration should be about three to four inches.

Adjust for smooth retracts operation

To adjust the retract operation the air pressure regulator should be adjusted for approximately 30PSI in the retract position and in the range of 0-15PSI in the extended position.

Speed and Torque Adjustment (where applicable)

- 1. Hydraulic
 - a. The speed can be adjusted on the flow control for the power pack.
 - b. To increase the speed move the handle on the flow control closer to the number 10.
 - c. To decrease the speed move the handle on the flow control closer to the number 1.
 - d. The torque must be set prior to operation and should be set between 600 and 900 PSI. For information on how to set the torque please refer to the Hydraulic Power Pack Manual.
- 2. Electric
 - a. The speed can be adjusted on the Variable Frequency Drive (VFD).
 - b. To increase the speed adjust the Hertz on the VFD to a higher number.
 - c. To decrease the speed adjust the Hertz on the VFD to a lower number.
 - d. The Overload on the Motor Starter protector(s) must be set at the lowest level to allow for operation. Adjust the amps in accordance with motor(s) name plate.





GENERAL OPERATION

Grill Brush Operation

Brush rotation starts and stops with a signal from the Customer supplied Controller system to the Customer's hydraulic power pack which drives the hydraulic motors on the brushes. This Controller Start-Stop signal should also control soap solution delivery to the spray bar on each brush.

BE CERTAIN THAT THE BRUSHES ROTATE AGAINST VEHICLE TRAVEL

With the brushes rotating (against the direction of vehicle travel and at proper RPM) the vehicle front grill contacts the washers at the center of the grill and travels across the grill of the vehicle maintaining steady contact while cleaning the front of the vehicle.

After passing beyond the front of the vehicle the brush will travel down the side of the vehicle continuing to clean the vehicle as a side brush.

Proper cloth penetration on flat vehicle surfaces should be 3 to 4 inches. As the wraparounds gear around corners, such as fenders, cloth penetration may be greater, but not deeper than half the distance to the aluminum brush core.

Optional Retract Operation

When selected by the Operator's remote Programmer push button station the wraparound brushes will retract from the center of the wash tunnel toward the tunnel outer walls. This can be done individually if one solenoid is used for each arm.

This is accomplished, when the push button is pressed, by completing an electrical circuit through the equipment Programmer to pass single phase power at the preset pulse count of the Programmer to the retract air solenoid valve. The air solenoid valve now opens and allows compressed air to pass through to the rod end port of each air cylinder causing the brush hangers to retract.



PREVENTIVE MAINTENANCE

DAILY

- 1. Check all hydraulic, air and chemical lines and fittings for leaks. Repair, or replace, as needed.
- 2. Check both brush units for proper operation and retract operation, listening for any unusual noises from the equipment.
- 3. Inspect brush cloth for cuts, grease, or oil. Remove and repair, or replace, any cloth panel if any of these conditions are found.
- 4. Check for proper chemical solution delivery.

WEEKLY

1. Grease the brush shaft four bolt flange bearings. Do not allow grease to come in contact with brush cloth.

FOR THE FIRST MONTH OF OPERATION CHECK ALL HARDWARE AND FITTINGS FOR TIGHTNESS EACH WEEK. PERFORM THIS INSPECTION TO THE SCHEDULE SHOWN BELOW AFTER THE FIRST MONTH OF OPERATION.

MONTHLY

- 1. Inspect all hardware and fittings for tightness.
- 2. Grease the brush hanger pillow block bearings. Do not allow grease to come in contact with brush cloth.
- 3. Inspect soap solution spray nozzles for wear. Replace, as necessary.
- 4. Thoroughly clean the equipment and framework.

SEMI-ANNUALLY

1. Carefully inspect brush equipment cloth for wear and damage. Replace as necessary



Hydraulic for Grill B • Torqmotor • SAE 0-Ring	rush TE Series				Bearing I Brush Shaft Itact seal			Bearin
a a						← 4-1/8in	-> 4	0010796
1	10000961 10006558	40010921		ltem #	Description		Need	Pric
tem #	Description		Price	40010796	AMI Bearing 4-Bolt Flan	ge 1-1/2"	2	\$28.0
0010921	Parker Hyd Motor TE0100FS1	00AAAC MF0609R	\$320.46	10005361	Bolt, Hex 1/2-13" x 8" Z	n 50C800HCS5Z	4	2.0
10011177	Char-Lynn Hyd Motor 5.7 CL3	586 MF0609R	308.09	10001891	Washer, Flat USS 1/2" Z	n 50NWUS0Z	8	0.5
0000961	Connector 6400-8-10 JIC 1/2	in x 7/8-14in	1.48	10002896	Nut, Hex Stover-Lock 1/2	2-13" Zn 50CNLS0Z	4	0.3
0000880	Connector 2404 M JIC 1/2in x	k 1/2in MPT	1.32	Pivot A	rm Bearing		Q.	
0006558	Woodruff Key Half Moon 1/4i	n x 1-1/8in	1.03	for Gril	Brush	•	0	QM Bearing
0003765	Bolt,Hex 3/8-16" x 1-1/4" Zn	37C125HCS5Z	0.30	Double r	oller bearing		1	
	Washer, Split Lock 3/8in Zinc annel for Grill Brush		0.13 DNNY'S	 Used on 	: brush arms since 2008	5-13/32in		1000735
yaraunc					Presidentification			Pric
ydraune	- P			Item #	Description			
yaraunc				Item # 10007357	Bearing 2-Bolt Pillow Bl	lock 1.5in Timken		\$141.2
ydraulic								
	Description		Price	10007357	Bearing 2-Bolt Pillow Bl	2 Zn 50C250HCS5Z		\$141.2 0.6 0.3
y dra unic tem # 0007255	Description Torque Channel w/Knobs Top	Side Brush	Price \$90.00	10007357 10004171	Bearing 2-Bolt Pillow Bl Bolt, Hex 1/2-13 x 2-1/2	2 Zn 50C250HCS5Z Zn 50NWSA0Z		0.6 0.3 0.3
tem # 0007255		Shaft 🛛 🕵 S	2227/22	10007357 10004171 10001354 10002896 Second & Hose	Bearing 2-Bolt Pillow Bl Bolt, Hex 1/2-13 x 2-1/2 Washer, Flat SAE 1/2in 2	2 Zn 50C250HCS5Z Zn 50NWSA0Z /2-13" Zn 50CNLS0Z g	≷ SO	0.6 0.2 0.2
em # 0007255 irill Brus	Torque Channel w/Knobs Top	Shaft 🛛 🕵 S	\$90.00 ONNY'S	10007357 10004171 10001354 10002896 Second & Hose • 2-Bolt ta	Bearing 2-Bolt Pillow Bl Bolt, Hex 1/2-13 x 2-1/2 Washer, Flat SAE 1/2in 2 Nut, Hex Stover-Lock 1/ Ary Arm Bearing Pivot Assembly pped bearing	2 Zn 50C250HCS5Z Zn 50NWSA0Z /2-13" Zn 50CNLS0Z g	SO 2 3-1/4ir 1000547	
tem # 0007255 Arill Brus	Torque Channel w/Knobs Top h C-Channel Hubs & S	Shaft 🛛 🕵 S	\$90.00 CONNY'S' — Top Hub — Middle Hub	10007357 10004171 10001354 10002896 Second & Hose • 2-Bolt ta Example of the second Se	Bearing 2-Bolt Pillow Bl Bolt, Hex 1/2-13 x 2-1/2 Washer, Flat SAE 1/2in 2 Nut, Hex Stover-Lock 1/ Interpret Assembly pped bearing Description	2 Zn 50C250HCS5Z Zn 50NWSA0Z 1/2-13" Zn 50CNLS0Z	- 3-1/4ir	
em # 0007255 irill Brus	Torque Channel w/Knobs Top h C-Channel Hubs & S (In Mildos) 12In Bottom	Shaft 🛛 🕵 S	\$90.00 CONNY'S' — Top Hub — Middle Hub	10007357 10004171 10001354 10002896 Second & Hose • 2-Bolt ta Example • 2-Bolt ta • 2-	Bearing 2-Bolt Pillow Bl Bolt, Hex 1/2-13 x 2-1/2 Washer, Flat SAE 1/2in 2 Nut, Hex Stover-Lock 1/ Pivot Assembly pped bearing Description Hose Pivot Assembly	2 Zn 50C250HCS5Z Zn 50NWSA0Z 12-13" Zn 50CNLS0Z	- 3-1/4ir	0.6 0.2 0.2 0.2 0.2 0.2 0.2 0.2 0.2 0.2 0.2
em # 0007255 rill Brus an 7qp 1 20007289	Torque Channel w/Knobs Top h C-Channel Hubs & S (In Middle 12in Bation	Shaft	\$90.00 ONNY'S' — Top Hub — Middle Hub — Bottom Hub	10007357 10004171 10001354 10002896 Second & Hose • 2-Bolt ta Example • 2-Bolt ta Exam	Bearing 2-Bolt Pillow Bi Bolt, Hex 1/2-13 x 2-1/2 Washer, Flat SAE 1/2in 2 Nut, Hex Stover-Lock 1/ Cary Arm Bearing Pivot Assembly pped bearing Divot Assembly Divot Sasembly Description Hose Pivot Assembly Bushing 5/8in 1.D. for O	2 Zn 50C250HCS5Z Zn 50NWSA0Z 12-13" Zn 50CNLS0Z	- 3-1/4ir	0.6 0.3 0.3 0.3 0.3 0.3 0.3 0.3 0.3 0.3 0.3
em # 0007255 irill Brus an 7ap 1 20007289 em #	Torque Channel w/Knobs Top h C-Channel Hubs & S (On Middle 12In Battor Description	Shaft \$\$ Image: state stat	\$90.00 ONNY'S — Top Hub — Middie Hub — Bottom Hub Price	10007357 10004171 10001354 10002896 Second & Hose • 2-Bolt ta Event 10005619 20000572 Item #	Bearing 2-Bolt Pillow Bi Bolt, Hex 1/2-13 x 2-1/2 Washer, Flat SAE 1/2in 2 Nut, Hex Stover-Lock 1/ Interpret Assembly pped bearing Description Hose Pivot Assembly Bushing 5/8in 1.D. for Co Description	2 Zn 50C250HCS5Z Zn 50NWSA0Z 12-13" Zn 50CNLS0Z	3-1/4ir 1000547	
em # 0007255 irill Brus an 7ap 1 20007289 em # 0002377	Torque Channel W/Knobs Top h C-Channel Hubs & S Con Mitadae 12in Battor 12in Battor Description Hub, 10in x 6in Spider Mount	Shaft S Image: state	\$90.00 ONNY'S' — Top Hub — Middie Hub — Bottom Hub Price \$76.99	10007357 10004171 10001354 10002896 Second & Hose • 2-Bolt ta Example • 2-Bolt ta Exam	Bearing 2-Bolt Pillow Bi Bolt, Hex 1/2-13 x 2-1/2 Washer, Flat SAE 1/2in 2 Nut, Hex Stover-Lock 1/ Cary Arm Bearing Pivot Assembly pped bearing Divot Assembly Divot Sasembly Description Hose Pivot Assembly Bushing 5/8in 1.D. for O	2 Zn 50C250HCS5Z Zn 50NWSA0Z 12-13" Zn 50CNLS0Z	- 3-1/4ir 1000547	0.6 0.3 0.2 0.2 0.2 0 0 0.2 0 0 0 0
em # 0007255 irill Brus an 7ap 1 20007289 em # 0002377 0002408	Torque Channel w/Knobs Top h C-Channel Hubs & S (In Milder (In Milder Description Hub, 10in x 6in Spider Mount Hub, 10in x 10in Spider Mount	Shaft Shaft S Shaft S	\$90.00 ONNY'S' — Top Hub — Middle Hub — Bottom Hub Bottom Hub Price \$76.99 113.89	10007357 10004171 10001354 10002896 Second & Hose • 2-Bolt ta USE • 2-Bolt ta	Bearing 2-Bolt Pillow Bi Bolt, Hex 1/2-13 x 2-1/2 Washer, Flat SAE 1/2in 2 Nut, Hex Stover-Lock 1/ Pivot Assembly pped bearing 10005619 Description Hose Pivot Assembly Bushing 5/8in 1.D. for O Description AMI Bearing 2-Bolt Tap Bolt, Hex 1/2-13" x 2"	2 Zn 50C250HCS5Z Zn 50NWSA0Z 12-13" Zn 50CNLS0Z	3-1/4ir 1000547	0.6 0.3 0.2 0.2 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
em # 1007255 rill Brus 1007255 rill Brus 2007289 em # 1002377 1002408	Torque Channel W/Knobs Top h C-Channel Hubs & S Con Mitadae 12in Battor 12in Battor Description Hub, 10in x 6in Spider Mount	Shaft Shaft S Shaft S	\$90.00 ONNY'S' — Top Hub — Middie Hub — Bottom Hub Price \$76.99	10007357 10004171 10001354 10002896 Second & Hose • 2-Bolt ta View # 10005619 20000572 Item # 10005478	Bearing 2-Bolt Pillow Bi Bolt, Hex 1/2-13 x 2-1/2 Washer, Flat SAE 1/2in 2 Nut, Hex Stover-Lock 1/ Pivot Assembly pped bearing 10005619 Description Hose Pivot Assembly Bushing 5/8in 1.D. for O Description AMI Bearing 2-Bolt Tap Bolt, Hex 1/2-13" x 2"	2 Zn 50C250HCS5Z Zn 50NWSA0Z (2-13" Zn 50CNLS0Z 9 20000572 0mni Drive Arm pped Base 1-1/2in Zn 50C200HCS5Z	4 3-1/4ir 1000547	0.6 0.2 0.2 0.2 0.2 0.2 0.2 0.2 0.2 0.2 0.2
em # 0007255 irill Brus an Tap 1	Torque Channel w/Knobs Top h C-Channel Hubs & S (In Milder (In Milder Description Hub, 10in x 6in Spider Mount Hub, 10in x 10in Spider Mount	Shaft Shaft S Shaft S	\$90.00 ONNY'S' — Top Hub — Middle Hub — Bottom Hub Bottom Hub Price \$76.99 113.89	10007357 10004171 10001354 10002896 Second & Hose • 2-Bolt ta USE • 2-Bolt ta	Bearing 2-Bolt Pillow Bi Bolt, Hex 1/2-13 x 2-1/2 Washer, Flat SAE 1/2in 2 Nut, Hex Stover-Lock 1/ Pivot Assembly pped bearing 10005619 Description Hose Pivot Assembly Bushing 5/8in 1.D. for O Description AMI Bearing 2-Bolt Tap Bolt, Hex 1/2-13" x 2"	2 Zn 50C250HCS52 Zn 50NWSA0Z (2-13" Zn 50CNLS0Z 9 20000572 0mni Drive Arm pped Base 1-1/2in Zn 50C200HCS52 /2 Zc 50C150HCS52	Need 2 2	0.6 0.3 0.3 0.3 0.3 0.3 0.3 0.3 0.3 0.3 0.3

PARTS

Manual-O, Front Grill Brush 16v1 - Rev 2021-A

SonnysDirect.com Page 23 of 26 published without prior written consent. Content, prices, and availability subject to change without notice.





© 2021 SONNY'S The CarWash Factory®. All Rights Reserved.

SonnysDirect.com This document is confidential and proprietary to SONNY'S and cannot be used, disclosed or Page 24 of 26 published without prior written consent. Content, prices, and availability subject to change without notice.



WARRANTY

SONNY'S ENTERPRISES, INC. **FACTORY LIMITED** LIFETIME WARRANTY

Equipment manufactured by SONNY'S ENTERPRISES, INC. is warranted to be free from defect in material and workmanship. Welded metal framework and other non-moving, non-wearable fabricated metal components manufactured by SONNY'S are warranted for the life of the equipment to the original purchaser. Fabricated metal wearable surface and moving components manufactured by SONNY'S are warranted for a period of one (1) year to the original purchaser of the equipment.

All components assembled to SONNY'S equipment that are manufactured by others are warranted by the appropriate manufacturer and subject to that manufacturer's limited warranty. Contact SONNY'S for the specific information on other component manufacturer's warranty terms. All new cloth shipped with new SONNY'S equipment is warranted for a period of one (1) year or 80,000, whichever occurs first.

This warranty is not assignable or transferable. The warranty period begins the first day following installation or 30 days from the original invoice date, whichever occurs first. The Seller's liability shall be limited to repair or replacement of materials found to be defective within the warranty period. In the event of repair or replacement this limited warranty is noncumulative. The Purchaser must supply the Seller with immediate written notice when any defects are found. The Seller shall have the option of requiring the return of defective material to establish the Purchaser's claim. Neither labor nor transportation charges are included in this warranty. Transportation damage claims are to be submitted to the carrier of the damaged materials.

This warranty is based upon the Purchaser's reasonable care and maintenance of the warranted equipment. It does not apply to any equipment which has been subject to misuse, including neglect, accident or exposure to harsh chemicals or chemicals that react violently with water, organic acids (e.g. acetic acid), inorganic acids (e.g. hydrofluoric acid), oxidizing agents (e.g. peroxides), and metals (e.g. aluminum). Chemicals corrosive to aluminum alloys, carbon steel, and other metals. Nor does it apply to any equipment which has been repaired or altered by anyone not so authorized by SONNY'S. Further, the equipment must be properly installed with proper accuracy of all specified plumbing, electrical, and mechanical requirements. This warranty does not apply to normal wear and tear or routine maintenance components.

EXCEPT AS EXPRESSLY STATED HEREIN, SONNY'S SHALL NOT BE LIABLE FOR DAMAGES OF ANY KIND IN CONNECTION WITH THE PURCHASE, MAINTENANCE, OR USE OF THIS EQUIPMENT INCLUDING LOSS OF PROFITS AND ALL CLAIMS FOR CONSEQUENTIAL DAMAGES. THE LIMITED WARRANTY EXPRESSED HEREIN IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED. SONNY'S NEITHER ASSUMES NOR AUTHORIZES ANY PERSON TO ASSUME FOR IT ANY OTHER OBLIGATION OR LIABILITY IN CONNECTION HEREWITH.

© 2021 SONNY'S The CarWash Factory[®]. All Rights Reserved.

SonnysDirect.com This document is confidential and proprietary to SONNY'S and cannot be used, disclosed or Page 25 of 26 published without prior written consent. Content, prices, and availability subject to change without notice.



CUSTOMER SERVICE

Please contact SONNY'S Equipment Department for installation and/or operational questions regarding this piece of equipment.

Please refer to the Parts Catalog and contact SONNY'S Customer Service Order Entry Department for any replacement parts for this piece of equipment.

You can also visit the web at <u>www.SonnysDirect.com</u>.

DEPARTMENT Toll Free Main Line Equipment Department **PHONE NUMBERS** 800-327-8723 954-720-4100 **FAX NUMBERS** 800-495-4049 954-720-9292

Or you can email Sales at sales@SonnysDirect.com

Thank you for being a SONNY'S car wash equipment owner!

From all of us here at

