



# Dual Action Grill Brush Retrofit Kit




**Sonny's Enterprises, Inc.**  
5605 Hiatus Road  
Tamarac, Florida 33321

## Installing the Hush Brush Retrofit Kit

The Hush Brush Retrofit Kit is designed to upgrade the older grill brush design in order to work more efficiently with certain vehicles, such as the Dodge Challenger.

You will be replacing the brushes at **Level 1** and **Level 3** on each hub. The Retrofit Kit contains new brush pieces for Level 1 and 3, which will be used with your current brush pieces for Levels 2, 4 and 5.

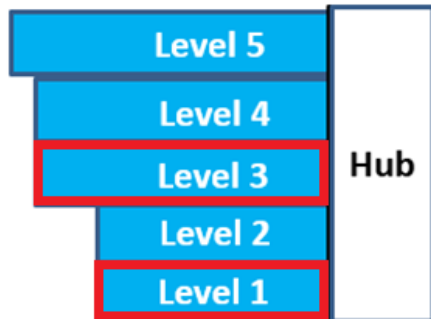


1. Begin removing the **12 brush pieces** on **Level 5**, the **top level** on the hub. Slide each brush piece up and out of the hub channel.
2. Be sure to save the brush pieces for Level 5. Put them off to the side safe keeping.
3. Remove the **20 brush pieces** on **Level 4**. Put them off to the side safe keeping.
4. Remove the **36 brush pieces** currently in **Level 3**. These pieces will be replaced, so you do not need to keep them.
5. Remove the **36 brush pieces** on **Level 2**. *You will be using 20 of these pieces*, so put 20 of them off to the side for safe keeping.
6. Remove the **36 brush pieces** currently in **Level 1**. These pieces will be replaced, so you do not need to keep them.

Next, you will be working in reverse order, as you install the brush pieces.


7. Install the **36 pieces** for **Level 1** that came with your retrofit kit. (**10" x 20" Hush Brush**)

**Note:** The correct way to install the Neoglide Hush Brush material is with the **closed end of the fold installed on top**.

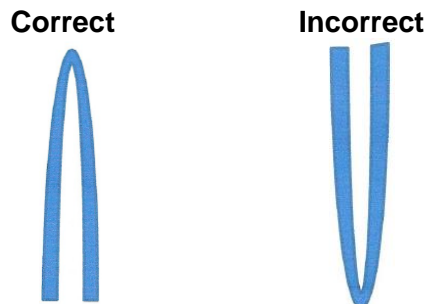


**Note:** 10” buffers are used with the Level 1 brushes. Level 2 uses 6” buffers. Levels 3-5 use 4” buffers.

HUB 48in H x 10in W	
Qty.	Dimensions
12	8in x 26in Hush - 4in buffers
20	10in x 24in Hush - 4in buffers
20	10in x 24in 2ply - 4in buffers
20	10in x 20in Hush - 6in buffer
36	10in x 20in Hush - 10in buffers

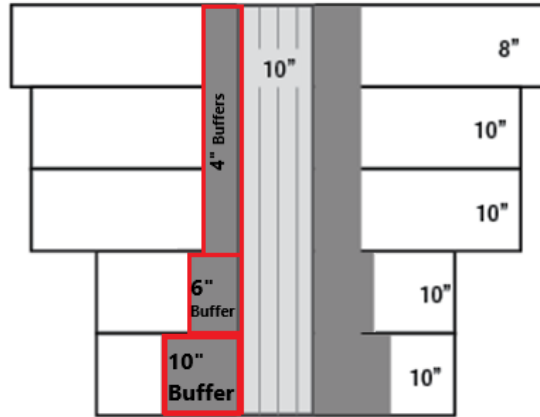

There are 36 - 10” x 20” Hush Brush pieces with 10” buffers for Level 1, so each of the 36 slots should be filled with a brush piece.

### Insert Pattern – Level 1 – 36 pieces

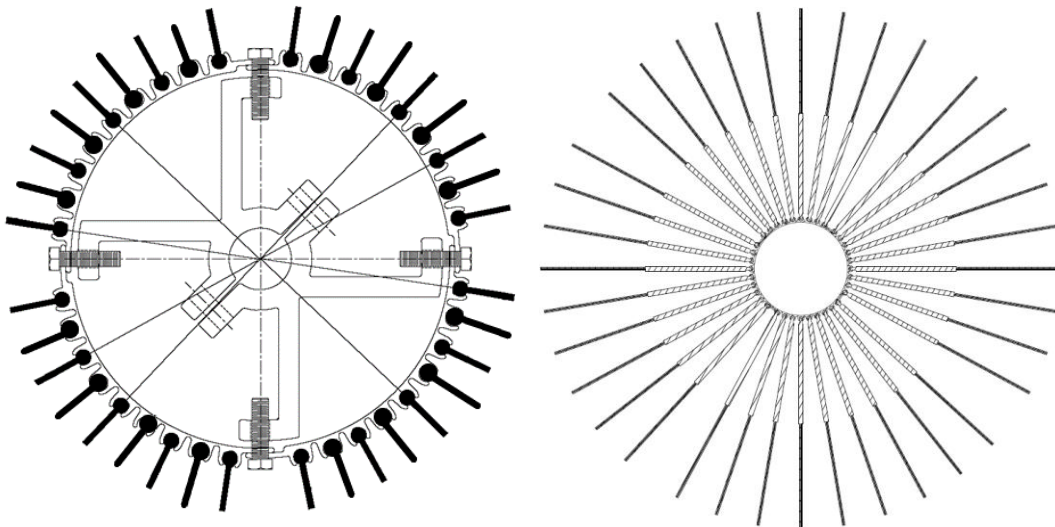


8. Install the 20 brush pieces that you saved for Level 2. (10” x 20” Hush Brush)
9. Install the 20 brush pieces for Level 3 that came with your retrofit kit. (10” x 24” Double Ply)
10. Install the 20 brush pieces that you saved for Level 4. (10” x 24” Hush Brush)

For **Levels 2-4**, use the following cross section as a guide for which channels to use, and which channels to leave empty.

Neoglides Brush Material in the channel = ● Empty Channel = ○


**Insert Patterns – Levels 2 - 4 – 20 pieces**

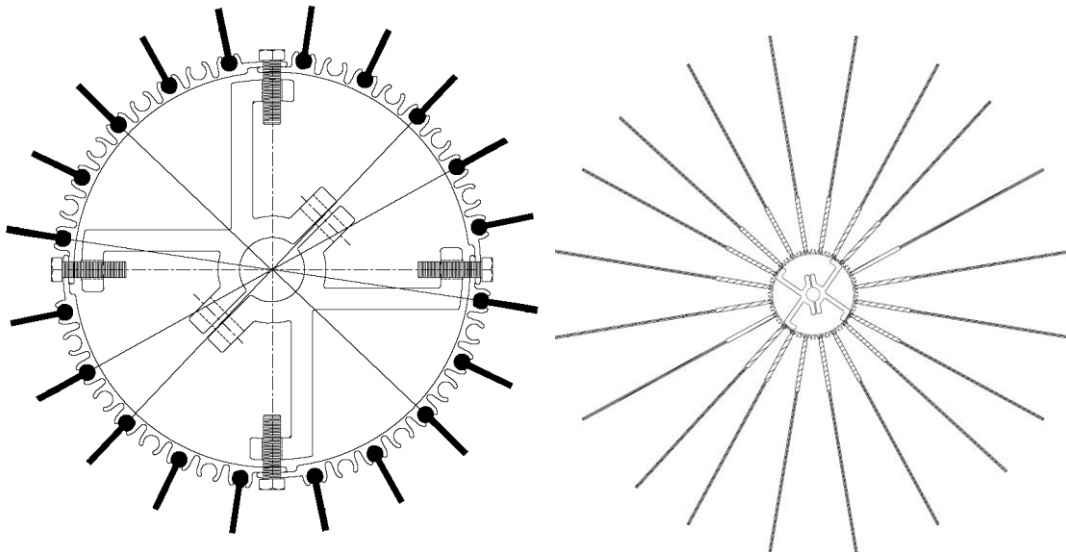

11. Install the **12 brush pieces** that you saved for **Level 5. (8" x 26" Hush Brush)**

For **Level 5** (top level), use the following cross section as a guide for which channels to use, and which channels to leave empty.

**Insert Patterns – Level 5 – 12 pieces**

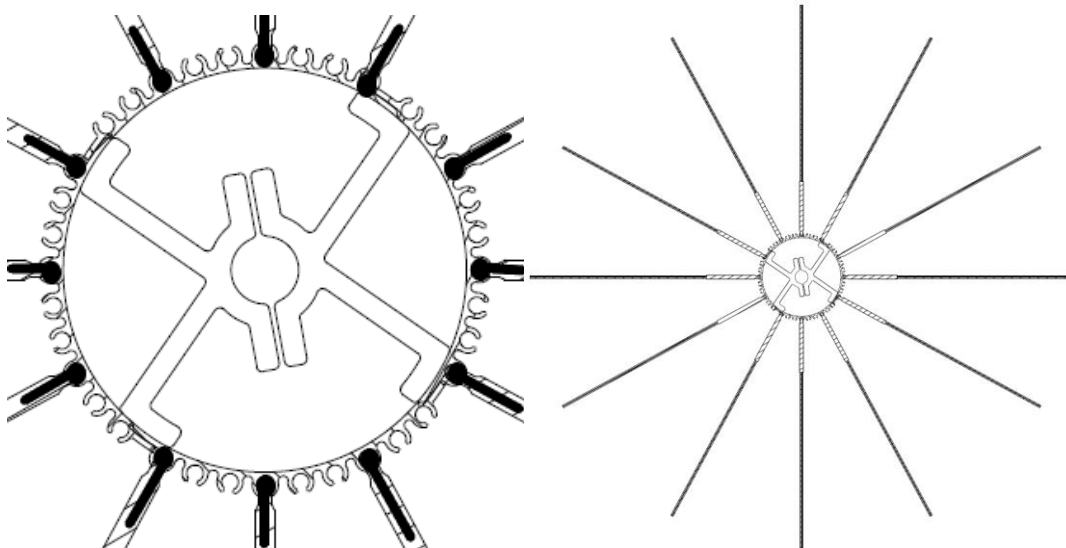

## Questions?

Contact:

Sonny's Technical Support Team  
1-800-327-8723  
Ext: 234